

A300 Audio Greeter Troubleshooting Guide

Problem	Possible Cause	Solution
1. Low outbound volume to the menu sign speaker.	<ol style="list-style-type: none">1. The NIGHT STATUS light on.2. The MENU SPKR VOL potentiometer is set too low.3. Defective menu speaker or A300.	<ol style="list-style-type: none">1. Press the DAY/NIGHT button until the NIGHT STATUS goes off.2. Increase the setting of the MENU SPKR VOL potentiometer, located on the left side of the A300.3. Measure resistance of speaker and verify that it works properly. If not call for authorized service.
2. Cannot record message.	<ol style="list-style-type: none">1. External microphone not connected.2. External microphone defective.	<ol style="list-style-type: none">1. Verify that external microphone plug is fully inserted into microphone jack J6.2. Use internal microphone (internal microphone is automatically selected when external microphone is unplugged).



E.S.S., Inc.
203 McMillin Street, Nashville TN 37203
Phone: 615-340-9033 Fax: 615-340-9642
www.essnashville.com